




## SIMPLE MODERN SHELVES

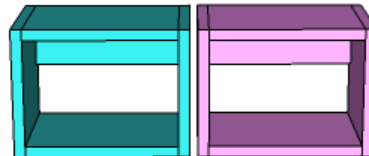





FOR MORE PLANS VISIT [MATTLANEWOODSHOP.COM](http://MATTLANEWOODSHOP.COM)

SUBSCRIBE TO MATT LANE'S YOUTUBE CHANNEL



# CUT LIST

- (10) 7" W X 9" L
- (6) 7" W X 12" L
- (4) 7" W X 24" L
- (5) 3 1/2" W X CUT TO FIT

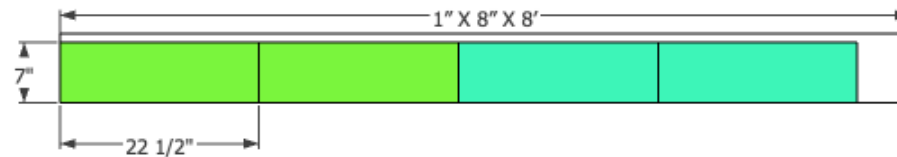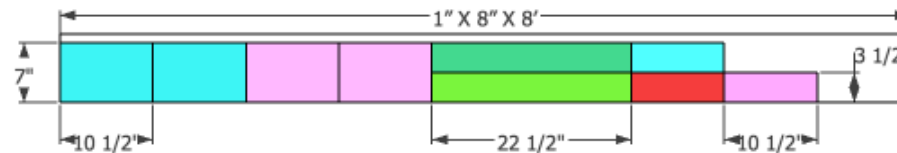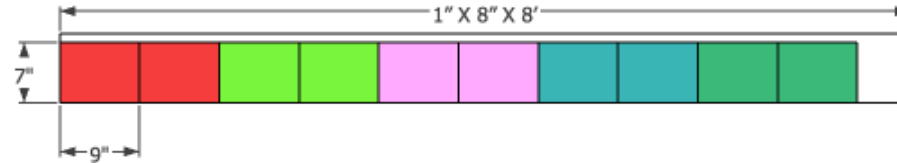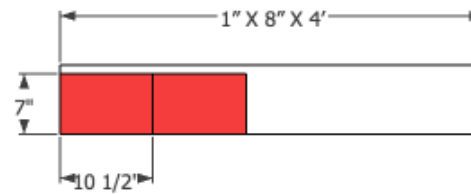



## MATERIALS LIST

(3) 1" X 8" X 8' - THESE ARE THE NOMINAL MEASUREMENTS. THE ACTUAL DIMENSIONS WILL BE 3/4" THICK- WHICH IS THE SAME MATERIAL I USED

(1) 1" X 6" X 4' - THESE ARE THE NOMINAL MEASUREMENTS. THE ACTUAL DIMENSIONS WILL BE 3/4" THICK- WHICH IS THE SAME MATERIAL I USED

WOOD GLUE

WOOD FILLER


2" WOOD SCREWS





## ASSEMBLE THE BOXES

1. NOW THAT YOU HAVE ALL OF YOUR PARTS CUT TO SIZE, GLUE AND CLAMP UP THE BOXES
2. ONCE THE GLUE IS DRIED, COUNTER SINK AND SCREW BOXES TOGETHER WITH TWO EVENLY SPACED 2" WOOD SCREWS
3. AT THIS POINT YOU CAN CUT YOUR HORIZONTAL BOX SUPPORTS TO FIT WITHIN THE INSIDE DIMENSIONS OF THE BOX
4. I ATTACHED THESE SUPPORTS WITH GLUE AND POCKET SCREWS

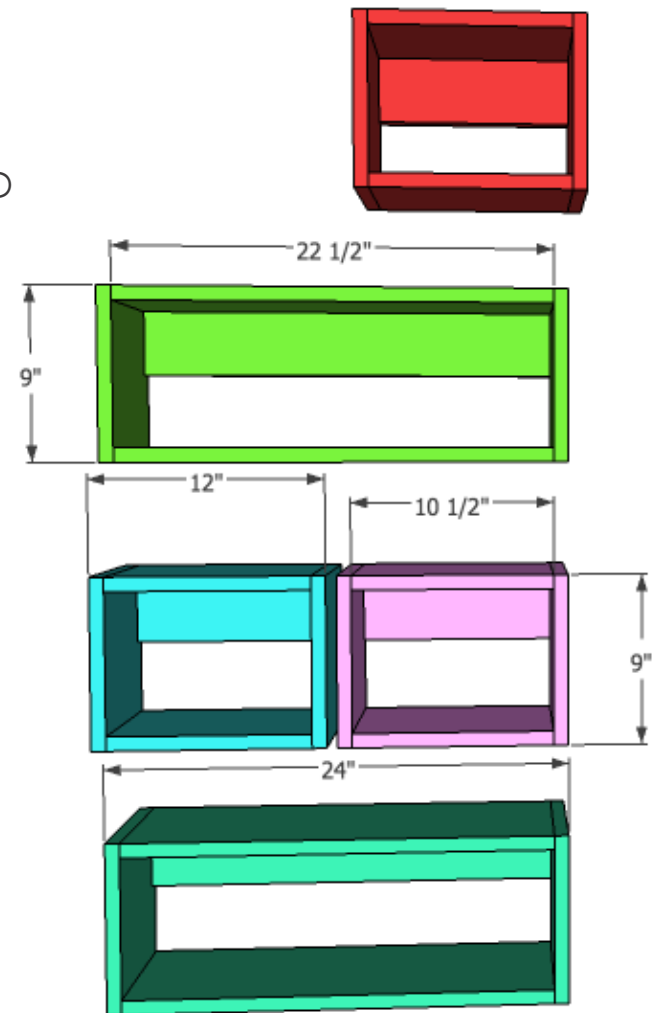



## FINISHING

1. FILL ALL SCREW HOLES AND IMPERFECTIONS WITH WOOD FILLER
2. SAND ALL SURFACES EVEN AND SMOOTH, I ONLY USED 120 GR BECUASE I KNEW I WAS BRUSH PAINTING THEM
3. APPLY FINISH OF YOUR CHOICE

